

RadioShack Limited Warranty

This product is warranted against defects for 90 days from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

We Service What We Sell 10/95

OPTIMUS® AM/FM Stereo Mate® Pocket Radio

- n Water Resistant
- n Earphones
- n Belt Clip
- n Removable Armband



Owner's Manual

Cat. No. 12-209

Listening Safely

To protect your hearing when using earphones, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Wearing earphones while driving a car or riding a bicycle can create a traffic hazard and can be illegal in some areas.

FCC Statement

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- Moving your radio from the receiver
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your radio.

Caring for Your Radio

To enjoy your radio for a long time:

- Handle it gently.
- Keep it away from dust, moisture, and temperature extremes.
- Clean it with a damp cloth. Do not use harsh chemicals.
- Do not take it apart. If something is wrong with the radio, take it to your local RadioShack store for assistance.

SPECIFICATIONS

AM 530-1710 kHz

FM 88-108 MHz

Power 2 AAA Batteries

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

12A6

Printed in Hong Kong


INSTALLING BATTERIES

Two AAA Batteries (not supplied)
(Cat. No. 23-555)

Cautions:

- Be sure the radio's case is free of dust and water before you open the cover.
- Match the polarity symbols (+ and -) marked inside the battery compartment.
- Always use fresh batteries of the required size and type.

USING THE RADIO

 — To power the radio, remove the rubber plug and connect earphones. To turn off the radio, unplug the earphones and replace the plug.


TUNING — rotate to select your favorite station.

AM/FM — move to select the desired band.

VOLUME — rotate to adjust the volume (see "Listening Safely").

MONO/STEREO — set to **STEREO** for stereo sound or to **MONO** for monaural sound on FM stations.

Notes:

- The earphones' cord acts as an FM antenna. Reposition the cord for the best reception. For AM stations, rotate the radio to the position that provides the best reception.
- To save battery power and protect the radio from dust and water, insert the rubber plug into the  jack when you are not using the radio.

USING THE BELT CLIP AND ARMBAND

*Illus. of
belt clip and armband
being attached
to back of radio*

© 1996 Tandy Corporation.
All Rights Reserved.

Optimus and Stereo Mate are registered trademarks used by Tandy Corporation.
RadioShack is a trademark used by Tandy Corporation.